

Quick Start Guide

Parani™ SD100/200

Bluetooth Serial Adapter




SENA
www.sena.com




To make a pair

Quick Pairing between the Parani devices

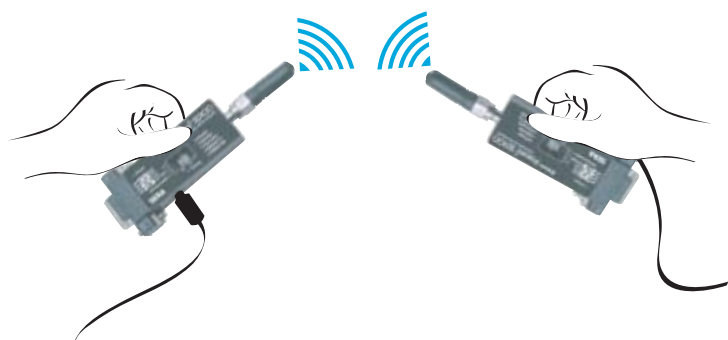

Parani-SD provides Pairing Button for instant configuration without a PC to make an automatic connection between two Parani-SDs. (Refer to the two Parani-SDs as SD1 and SD2, respectively.)

Quick Pairing with other Bluetooth devices

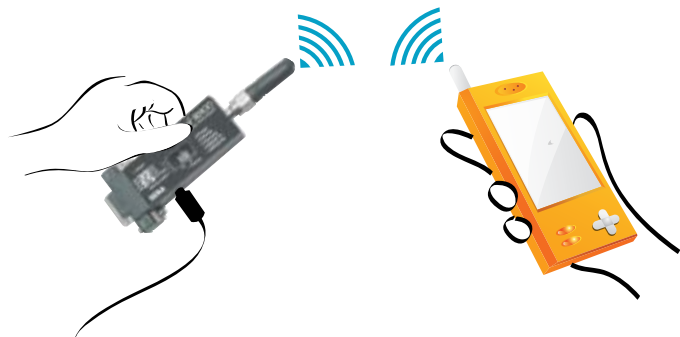

Using pairing button, users can make a pairing connection between a Parani-SD Series unit and other Bluetooth devices.

Serial Port Setting

There are four DIP switches for serial port configuration. The upper 3 are for setting baud rate, and the last one in the bottom is for setting hardware flow control option. To put the switch to left side represents OFF, and the right side ON. To disable hardware-based baud-rate configuration, set up the dip switch to "S/W config" In this case, the software configuration value will replace the one in the DIP switch. The default value of "S/W Config" Setup is 9600bps.

H/W Flow Control	OFF	ON
DIP Switch		

Baud Rate	2400	4800	9600	19.2K
DIP Switch				
Baud Rate	38.4K	57.6K	115.2K	S/W Config
DIP Switch				

- Step 1.** Turn on SD1 and SD2 and reset both of them by pressing Reset Button.
- Step 2.** Press the Pairing Button of SD1 for 2 seconds until Standby LED turns off and Connect LED blinks 3 times every 2 seconds. Keep the power ON.
- Step 3.** Press the Pairing Button of SD2 for 2 seconds until Standby LED turns off and Connect LED blinks 3 times every 2 seconds. Now press again the Pairing Button for 2 seconds until Connect LED blinks every 0.5 second.
- Step 4.** Wait for SD1 & SD2 to connect to each other until the Connect LED of SD1 and SD2 are fully solid green. It takes about 10 seconds to make a connection. If there are many Bluetooth devices nearby, it may take longer.
- Step 5.** Turn SD1 off and on. Connect LED blinks twice in green every 3 seconds.
- Step 6.** Turn SD2 off and on. Connect LED blinks once in green every 1 second.
- Step 7.** Now SD1 and SD2 are configured to make automatic connection to each other, whenever they are powered on. Using a pair of Parani-SD in this fashion is similar to that of using a wireless serial cable.

- Step 1.** Turn on Parani-SD and reset it by pressing Reset Button.
- Step 2.** Press the Pairing Button of Parani-SD for 2 seconds until Standby LED turns off and Connect LED blinks 3 times every 2 seconds. Keep the power ON.
- Step 3.** Users can discover and connect to Parani-SD by using the software or user interface of other Bluetooth device that they want to connect from.
- Step 4.** When they are connected, the Connect LED of Parani-SD is changed into fully solid green.
- Step 5.** Turn off and on. Connect LED blinks twice in green every 3 seconds.
- Step 6.** Now Parani-SD is waiting for a connection from the last connected Bluetooth device. The last connected Bluetooth device can connect to Parani-SD.

Configuration using software

If users want to configure and to connect step by step with diagnosis messages, then they may use either ParaniWin or Hyper terminal program. The Parani-SD Series supports AT command set for versatile operations.

Parani-SD Series default configuration is 9600bps Baud, 8 Data bit, No Parity, 1 Stop bit and Hardware flow control.

For more information, refer to the User Manual. You may download the ParaniWin and User Manual from CD or Sena website at <http://www.sena.com/support/downloads/>

Visit us at www.sena.com

Copyright 1998-2009, Sena Technologies, Inc. All rights reserved.